

Apply and center the application tape on the right side of the chainstay tube from the left side welding with a tolerance of +- 3mm

ROCKRIDER

<sup>start up</sup> KIDS 9-12 YO range name 26 INCH 500 26 EXPL 500

code conception **327187** 

product designer Kevyn GRUCHALA product engineer Faustine LETE


Apply and center the application tape with the top edge of the headtube as shown page 2, tolerance +- 3mmm



Apply and center the application tape from the welding of the right side of the downtube with a tolerance of 3mm

10 mm +/- 3mm from the lower part of the toptube

Apply the application tape 20 mm from the welding with a tolerance of 3mm anc center it with the top of the base tube following the cutting of the decal

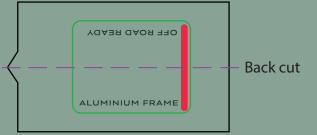

<sup>date</sup> 2023.11.20 update XXXX.XX.XX file name
OVERVIEW