



Apply and center the application tape from the welding of the left side of the downtube with a tolerance of 3 mm.




Apply the application tape from the welding with a tolerance of 2 mm and center it with the top tube.




Apply and center the application tape from the welding of the right side of the downtube with a tolerance of 3 mm





Apply the iso norm decal 30+/-3 mm from the welding backside of downtube

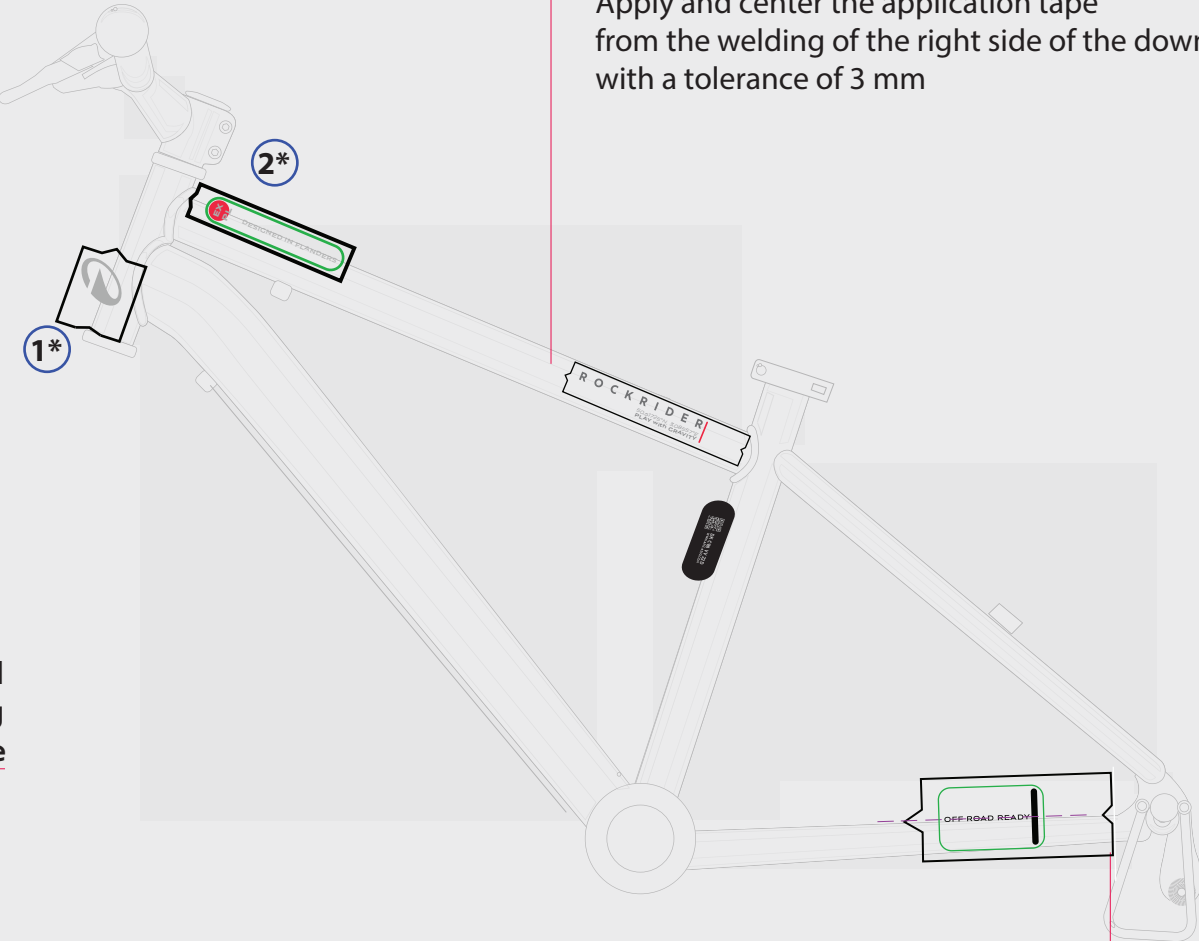


Apply the application tape 10 mm from the welding with a tolerance of 3mm anc center it with the top of the base tube

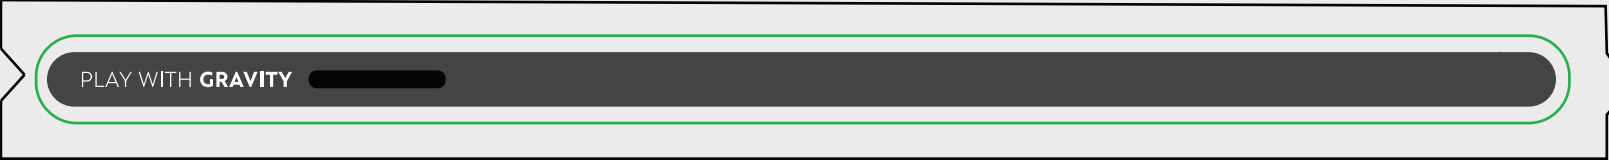

Apply and center the application tape on the right side of the chainstay tube from the left side welding with a tolerance of +/- 3mm

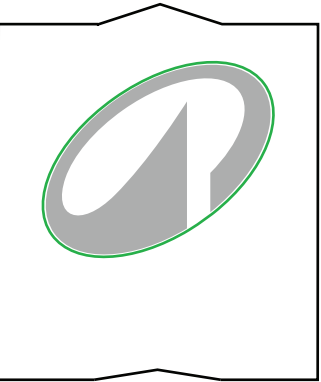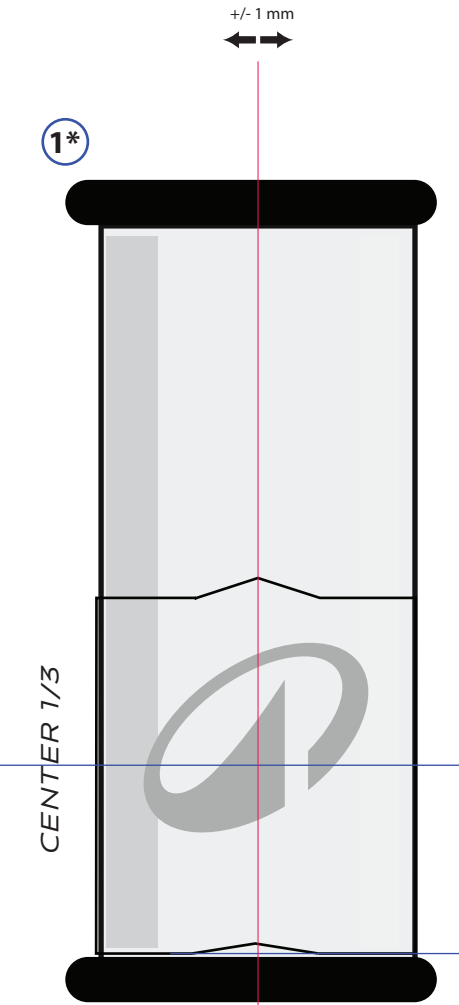

Apply and center the bottom part of the application tape with the down edge the headtube with a tolerance of 3 mm

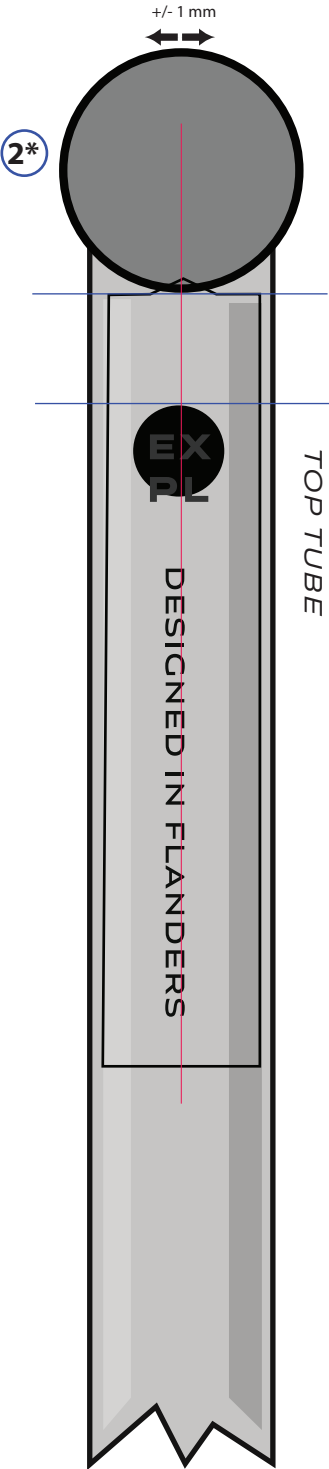

Apply the application tape from the headtube on top of the top tube with a tolerance of 3mm

ROCK RIDER

start up
KIDS 6-12 YO

range
20 INCH 120
20 INCH 500
24 INCH 500

name
20 EXPL 120
20 EXPL 500
24 EXPL 500

code conception
337842
330664
337767
337823

product designer
product engineer
Kevyn GRUCHALA
ALESSANDRO CALZA

date
2025.28.02

update
XXXX.XX.XX

file name
PASTING MAP

BACK PAPER
CUTTING LINE